
## **Breakout L76K**

## **GNSS/GPS Location Module**

- ▼ Active Low
- 3.3V IO Operating Vlotage
- Jumper Pads
- Interface
- Voltagle
- **11** Function Pin

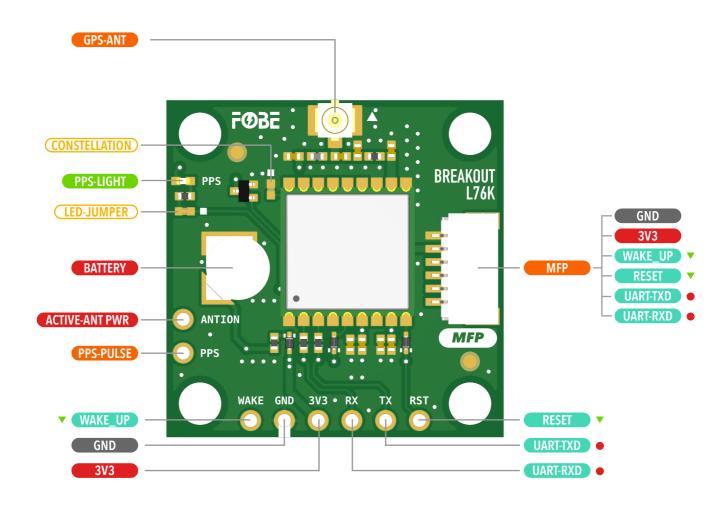

 ${\tt BATTERY: Build-in\ 3.1V\ Rechargeable\ Button\ Cell\ Battery\ for\ Data\ Retention}$ 

 ${\tt CONSTELLATION: Soldering\ to\ use: GPS+GLONASS;\ Default\ is\ BeiDou+GPS}$ 

PPS-PULSE: Outputs a pulse per second, works concurrently with the PPS LED, but not affected by JP2

ACTIVE-ANT PWR: Connected to 3V3 If using an active antenna.

Copyright © 2020-2025 FoBE Studio



## **Breakout L76K**

## **GNSS/GPS Location Module**

